


POCKET TONER INSTRUCTIONS

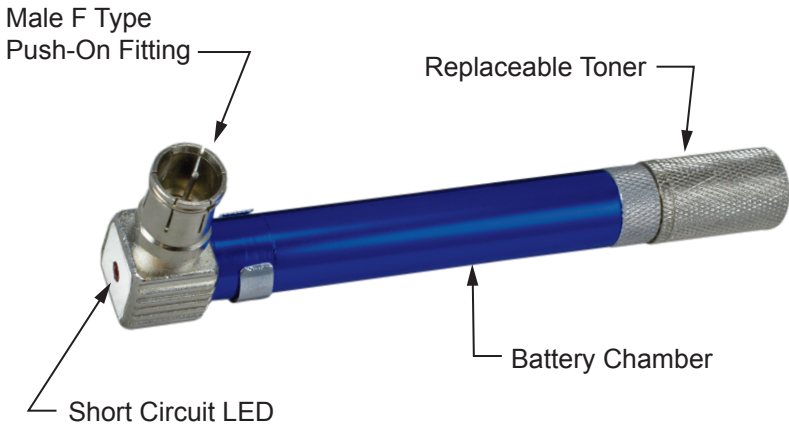

INSTRUCTIONS

This Pocket Toner is a DC cable continuity tester used to identify and trace individual cables when multiple cables are present. The installer will use the Pocket Toner to place a DC current through one end of the desired cable and identify the cable at the other end with the removable tone device.

BATTERY INSTALLATION / REPLACEMENT

The Pocket Toner uses one AAA battery (shipped loose). To install or replace the battery, unscrew the head section of the toner to access the battery chamber.

OPERATION

1. Unscrew the “tone” detector, which is conveniently stored in the base section.
2. The main section of the Pocket Toner houses the DC transmitter and has a male F push-on fitting. Attach push-on fitting to the end of the coaxial cable.
3. Touch the “tone” detector to each one of the cables at the remote location. When the correct cable from the transmitter is found, the tone will sound and the LED will illuminate.

Many splitters are short circuit to DC. If these splitters are in the cable line, LED will light up (no tone).

WARNING: *This tool should not be used on live electrical circuits. It is not protected against electrical shock.*